



Position	Part number	Name	Position	Part number	Name
101	95001001	Rear crankcase	410	950000410	Panel rear cover
103	YF203007	Oil seal 20x30x7	411	95004501	Capacitor
104	YF061204	Oil seal 6x12x4	413	95004800	AC overload protection
105	950000105	Stud bolt M6x113	414	950000414	CDI unit
106	95002004	Cylinder gasket	501	95004500	Stator
107	95002100	Cylinder	502	95004500	Rotor
108	95002003	Cylinder head gasket	503	950000503	Fan
109	95002002	Cylinder head	504	6203	Bearing 6203-RZ
110	012020003300	Spark plug F6TC	509	95004700	Socket 12V
111	95004400	Ignition coil	511	950000511	DC overload protection
113	95002001	Cylinder cover	516	95001005	Engine cover
118	95003400	Starter assembly	517	95001006	Robber foot
119	95003009	Nut M10x1,25	601	950000601	Governor lever
120	950000120	Flywheel	603	950000603	Spring
124	950000124	Coil ignition	607	950000607	Holder
125	95001002	Front crankcase	609	95002007	Bushing
126	6004	Bearing 6004	613	95005006	Governor fork
201	95003100	Crankshaft with connecting rod	614	950000614	Shaft
202	950000202	Needle bearing	615	950000615	Spring
203	95003004	Piston pin clip	616	950000616	Governor rod
204	95003005	Piston	701	95006100	Fuel tank
205	95003200	Piston ring	703	95006002	Fuel tank sieve
207	95003002	Piston Pin	705	95006200	Fuel tank cap
301	95005003	Insulator gasket	706	95006005	Fuel tank handle
302	95005200	Carburetor insulator	710	950000710	Seal ring
304	95005004	Carburetor gasket	711	95006300	Fuel faucet
305	95005100	Carburetor	712	950000712	Fuel tube
306	95005002	Carburetor intake gasket	713	950000713	Fuel tube clip
307	950000307	Air filter gasket	801	95002200	Muffler
401	950000401	Air filter cover	802	95002005	Muffler gasket
403	950000403	Engine switch			
405	950000405	Air filter element			
406	950000406	Panel			
407	950000407	Socket			
408	950000408	Fixing plate			